




 
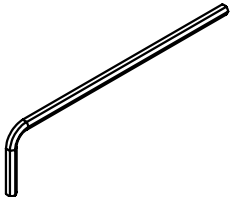
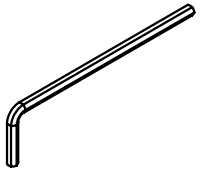
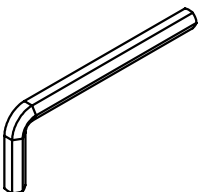


產品型號 Model	單件編號 Part No.	規格 Description	零件數量 Qty.
PC901-S	1	手臂套組 Arm Set	1

零件包編號 Part No.	零件包數量 Part Qty.	單件編號 Sub-part No.	單件數量 Sub-part Qty.	規格 Description	圖示 Image
A	1	A-A	4	M4 x 15mm 螺絲 M4 x 15mm Phillips Screw	
		A-B	4	M4 x 30mm 螺絲 M4 x 30mm Phillips Screw	
		A-C	4	M5 x 15mm 螺絲 M5 x 15mm Phillips Screw	
		A-D	4	M5 x 30mm 螺絲 M5 x 30mm Phillips Screw	
		A-E	4	5mm 塑膠墊片 5mm Spacer	
		A-F	4	10mm 塑膠墊片 10mm Spacer	
B	1	B-A	1	2.5mm 六角扳手 2.5mm Hex key	
		B-B	1	4mm 六角扳手 4mm Hex key	
		B-C	1	5mm 六角扳手 5mm Hex key	


※需自備十字螺絲起子

※ADDITIONAL TOOLS REQUIRED

- Phillips screwdriver


步驟一：將①手臂套組固定於桌面合適處，並將其旋扭轉緊。

Step 1: Place the ① <Arm Set> at the proper location of tabletop,
and lock tightly it with (B-C) 5mm Hex key.

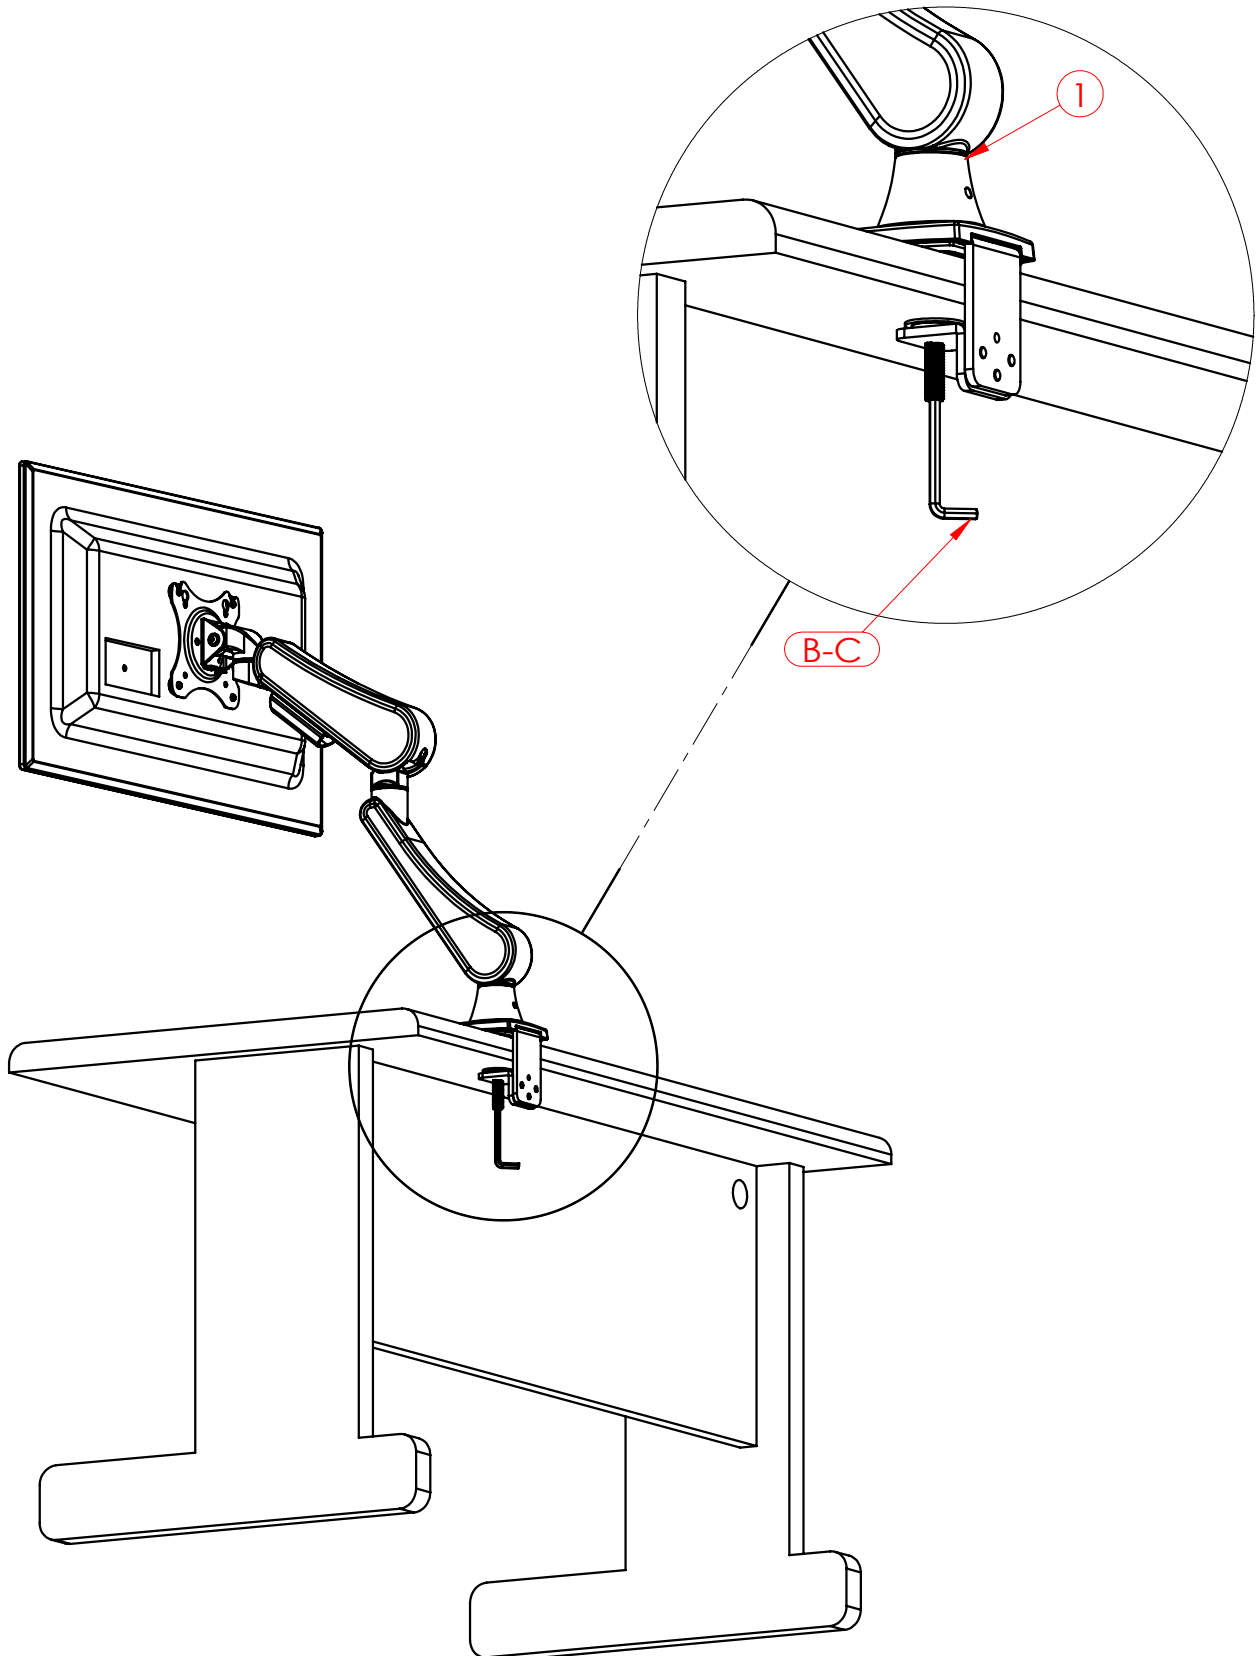


步驟二：依照螢幕需求，從A五金包選用適合的螺絲以及墊片。
使用螺絲起子鎖兩支螺絲到螢幕對應的兩個螺絲孔中。注意留下一段空隙。

Step 2: Select the correct screws and spacers from Hardware Pack A according to your monitor's specifications.
Using a screwdriver, partially insert two screws into the designated VESA mounting holes on the back of the monitor, leaving a small gap between the screw head and the monitor surface.

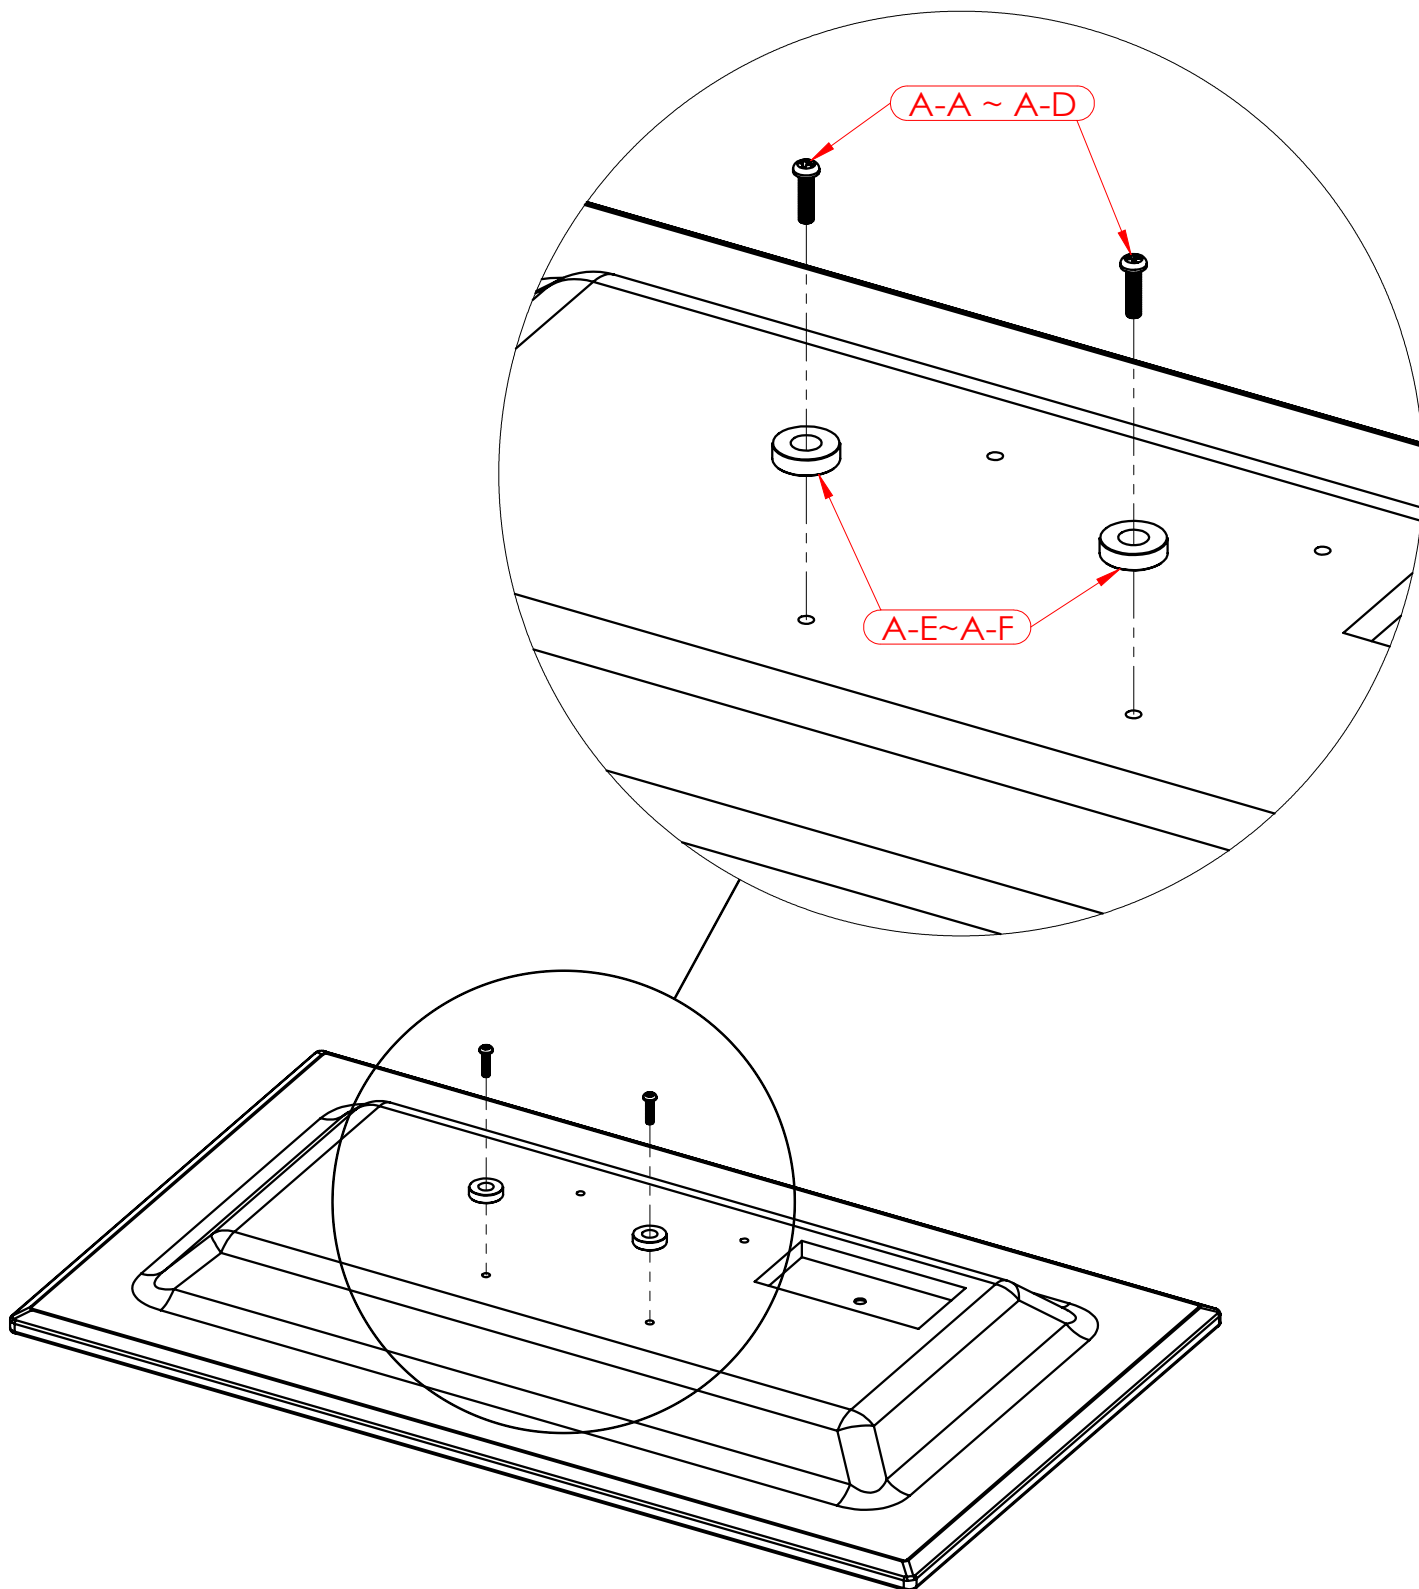


步驟三：將螢幕如圖插入① 手臂套組，使用螺絲起子固定螺絲。

Step 3: Insert monitor into vesa of ① <Arm Set> as shown below and tighten the screw via phillips screwdriver.

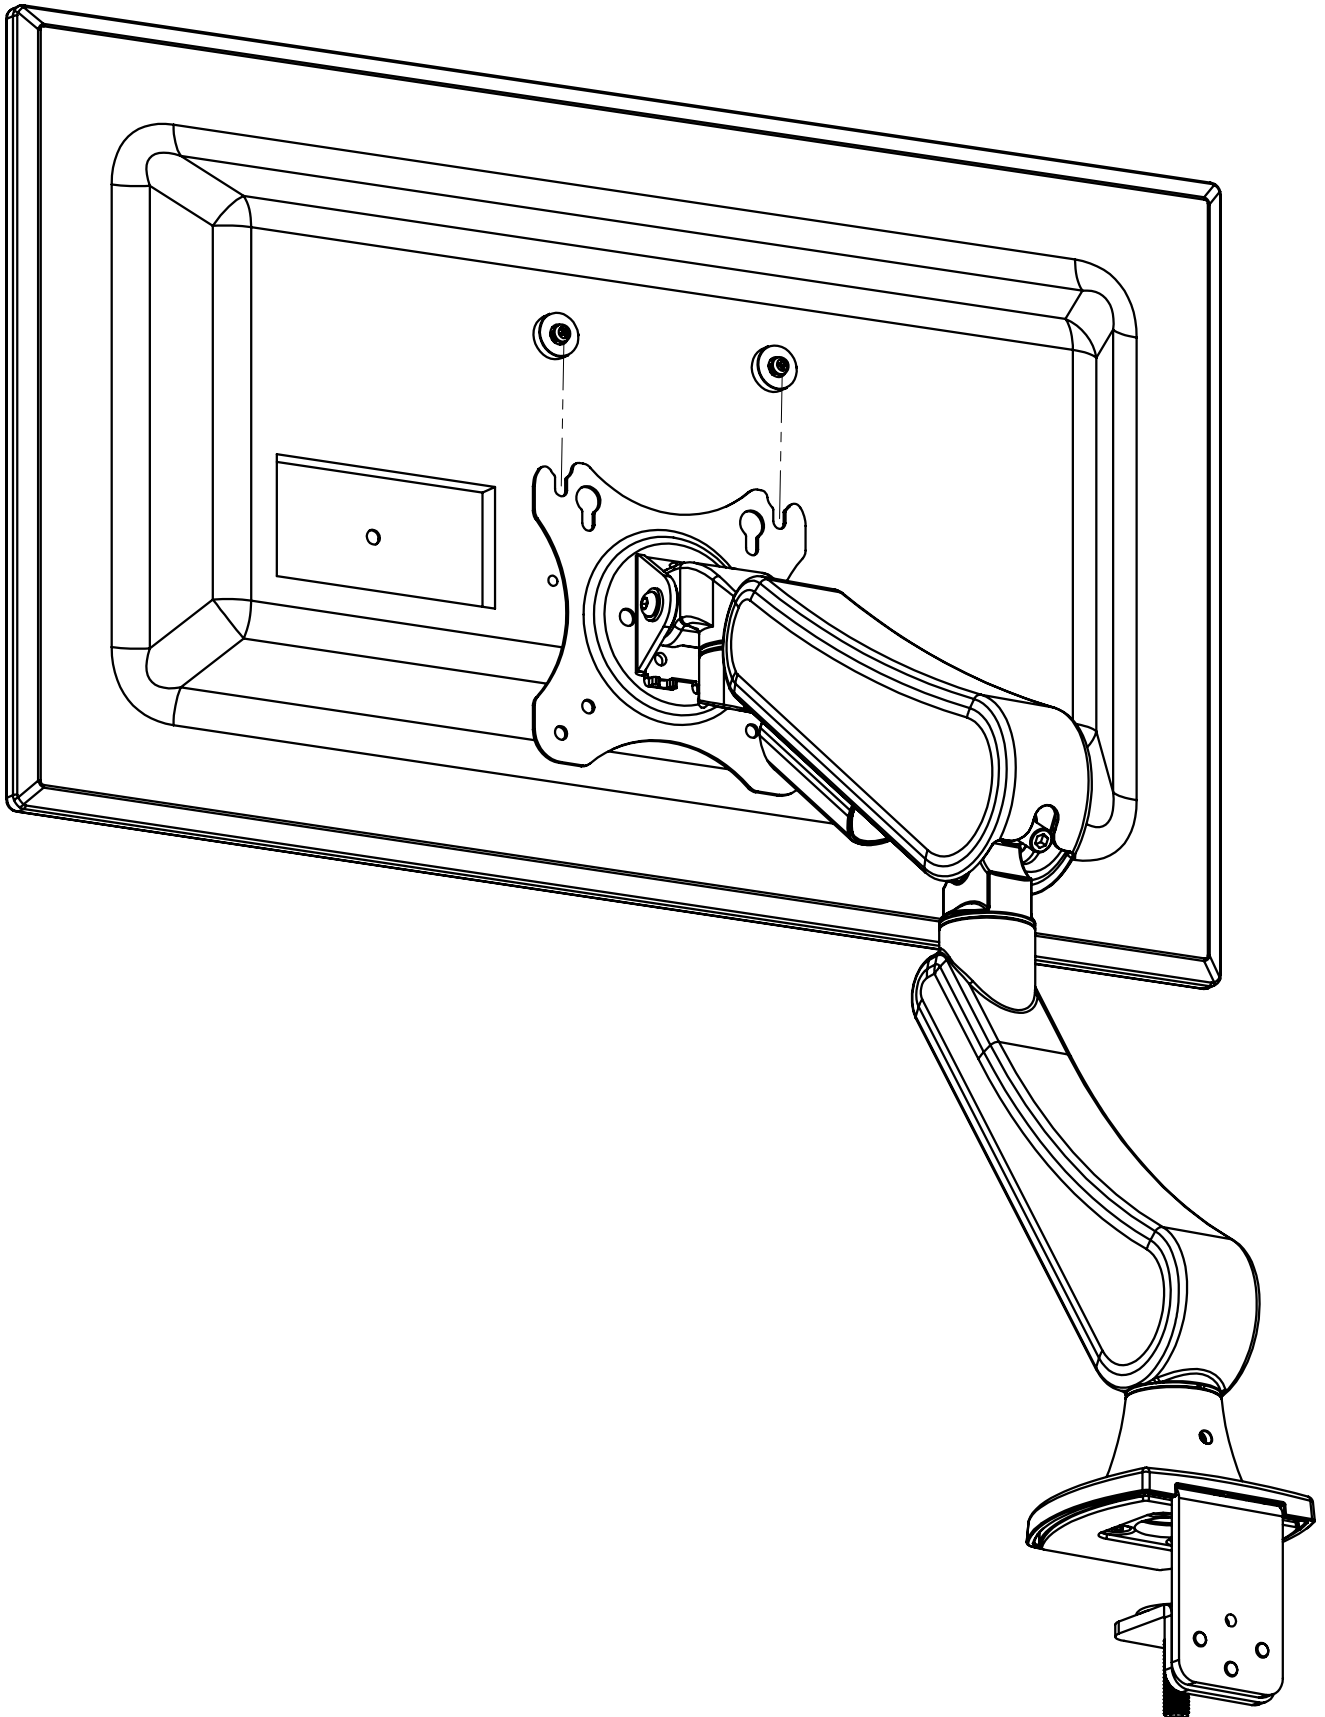

步驟四：選用與步驟二相同的螺絲對準下半部的螺絲孔，使用螺絲起子固定螺絲。
若在步驟二使用墊片，請在此使用相同的墊片。

Step 4 : Use the same type of screws as in Step 2, align them with the lower screw holes,
and fasten them using a screwdriver.
If spacers were used in Step 2, be sure to use the same spacers here as well.

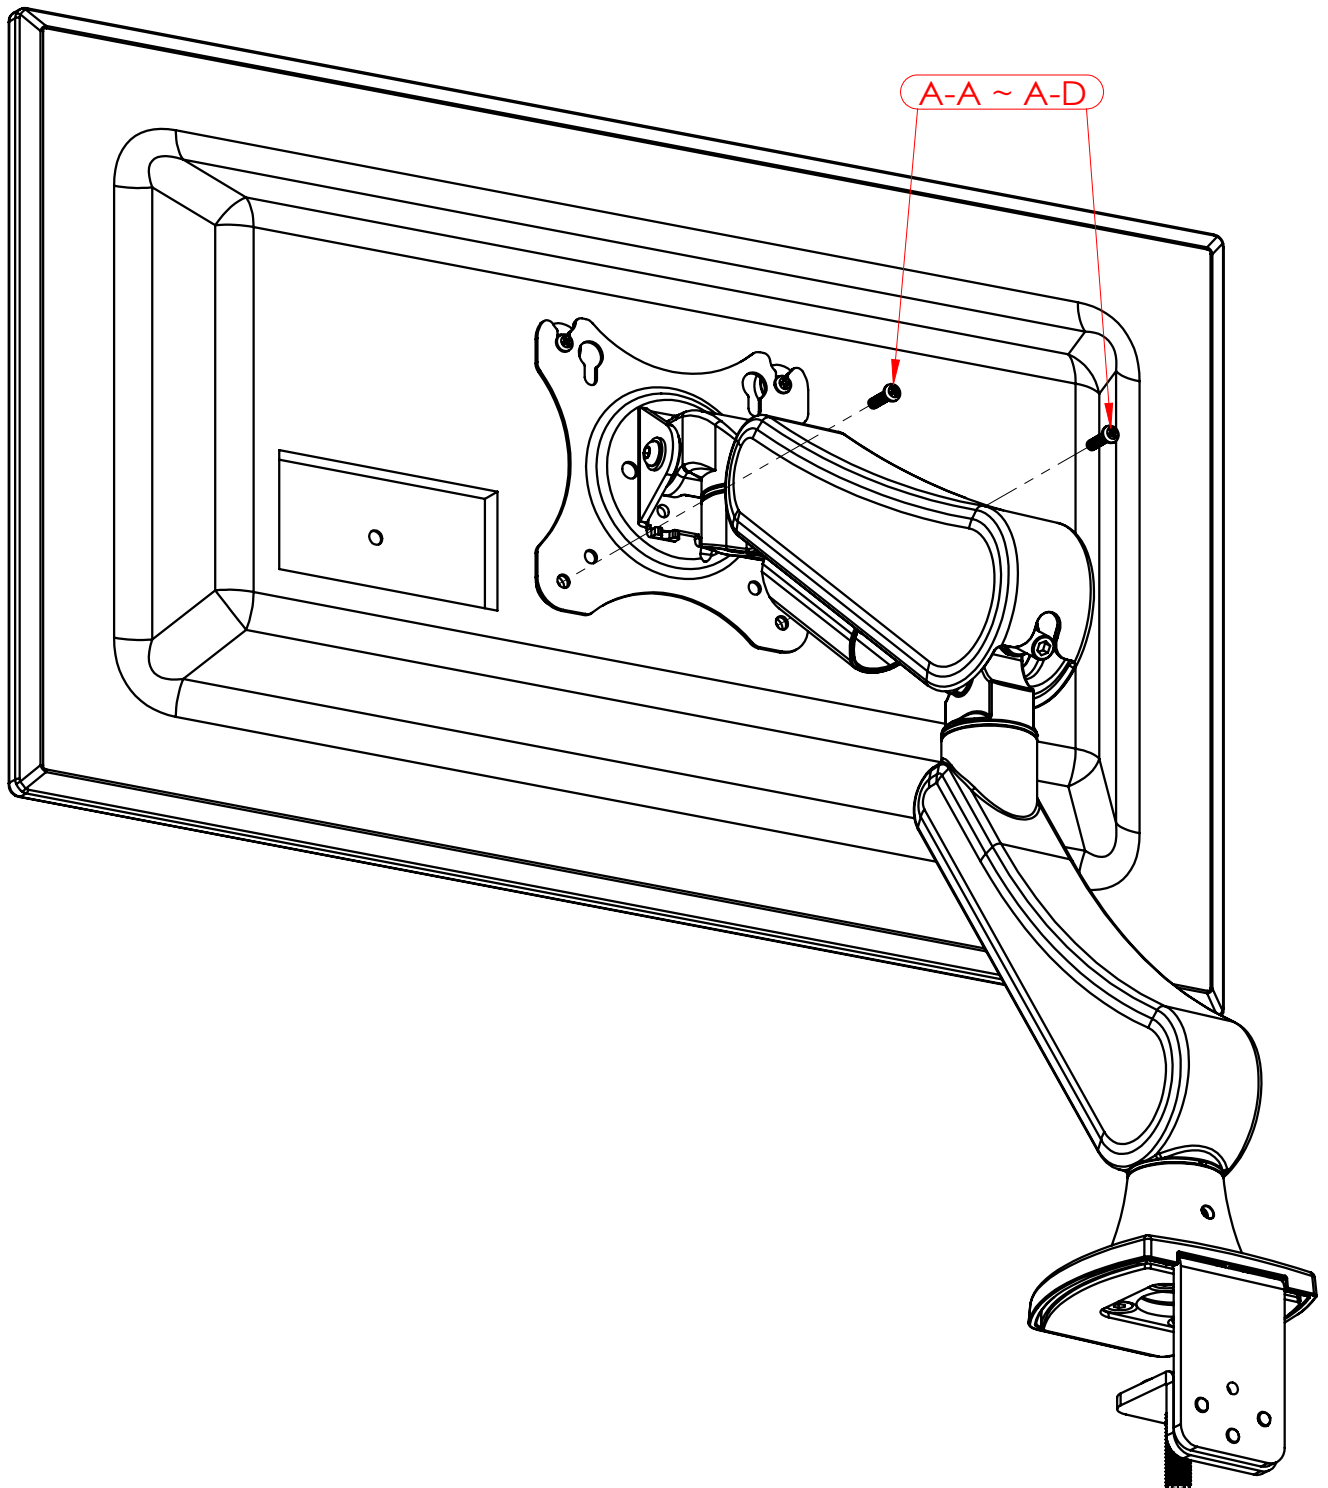


手臂支撐力調整方式：依照圖示，使用 (B-B) 扳手調整手臂支撐力。
注意：順時鐘方向為加強支撐力，逆時鐘方向為減輕支撐力。

Arm Tension Adjustment:

Use the (B-B) wrench to adjust the arm tension as shown in the diagram.

Note: Turn clockwise to increase tension; turn counterclockwise to decrease tension.

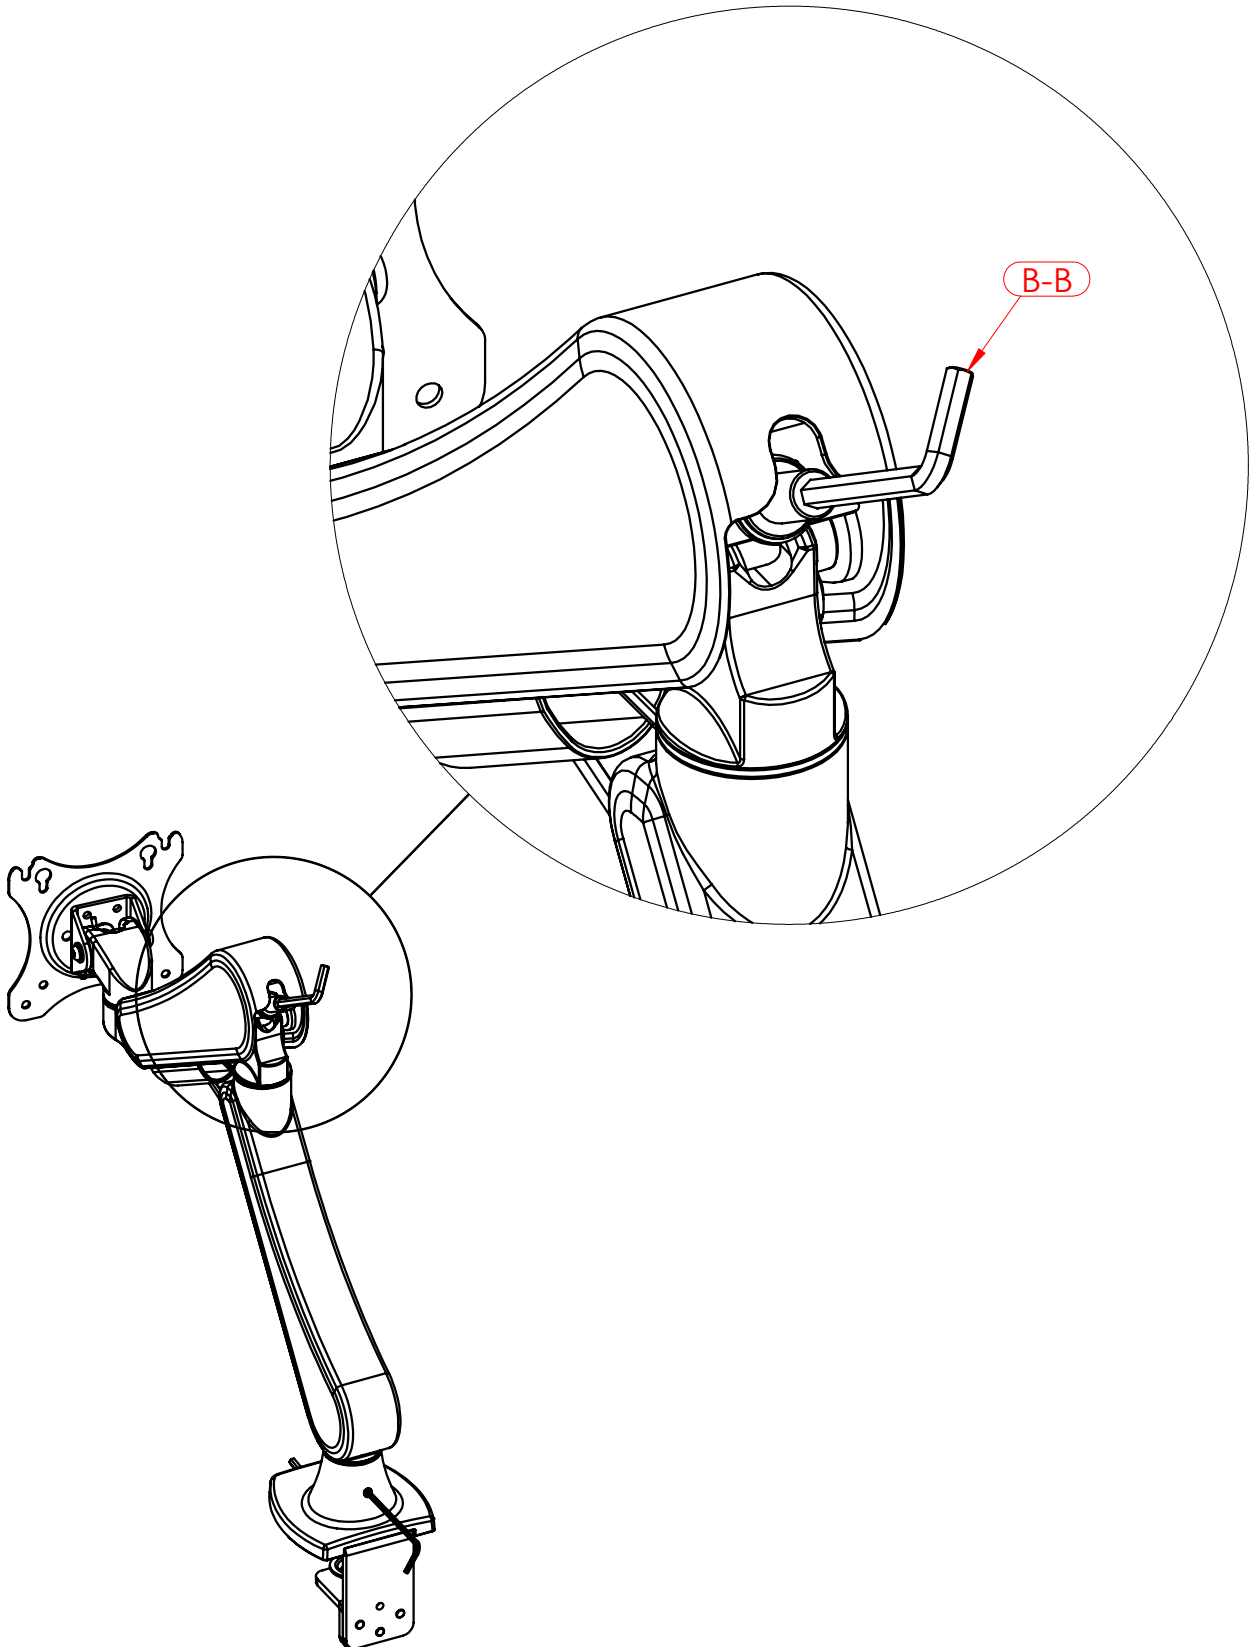

調整角度：

若需要調整手臂角度，可先使用 (B-A) 扳手，放鬆下圖位置的止付螺絲。



調整到合適角度後再將螺絲鎖緊固定。

Angle Adjustment:

If you need to adjust the angle of the arm,

first use the (B-A) wrench to loosen the set screw at the location shown in the diagram.

After adjusting the arm to the desired angle, re-tighten the screw to secure it in place.

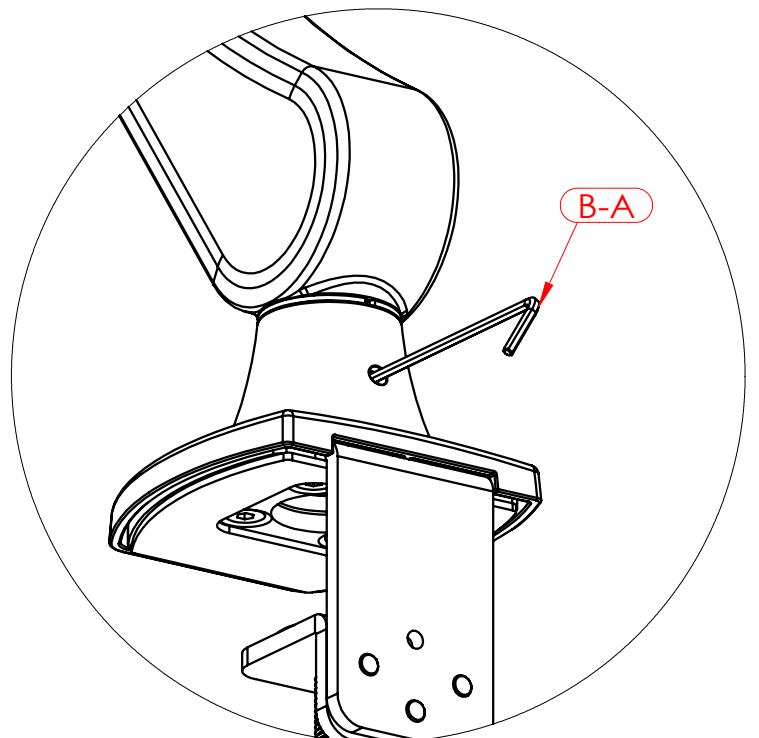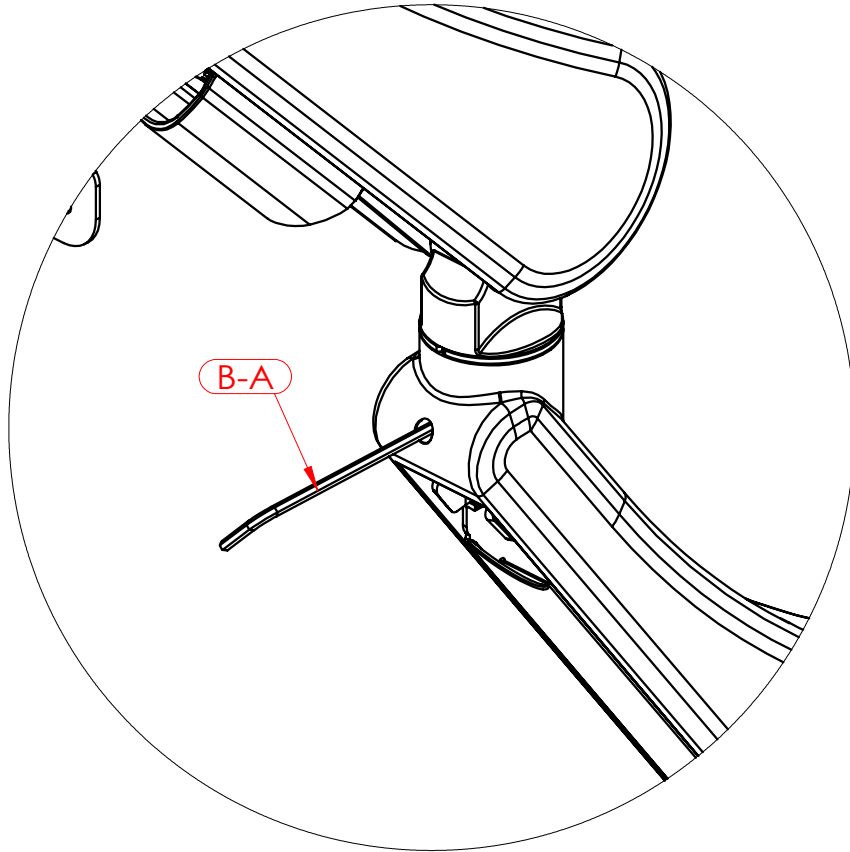

加固墊塊調整：

如果使用者認為手臂過於搖晃或無法自由旋轉，可以調整以下位置的加固墊塊鬆緊度。

(使用 (B-B) 扳手)

Reinforcement Block Adjustment:

If the user finds the arm too wobbly or difficult to rotate freely, the tension of the reinforcement block at the location shown can be adjusted by using the (B-B) wrench for this adjustment.

